



FlexiBowl® IP 40 option

# Summary


- 1 FlexiBowl® IP 40 option ..... 3**
  - 1.1 Description ..... 3**
  - 1.2 Parts list ..... 4**
  - 1.3 Use ..... 6**
  - 1.4 Installation and Maintenance ..... 6**

# 1 FlexiBowl® IP 40 option

## 1.1 Description

The IP 40 option can be used with **FlexiBowl®** 500/650/800 models in both Clockwise (C) and Counterclockwise (CC) configurations to protect the device from the ingress of solid objects larger than Ø 1 mm. The kit acts externally on objects such as tools, wires or production waste generated by neighbouring machines. While in the upper part on residues from the fed components, e.g. machining swarf or dirt collected during transport to the **FlexiBowl®** system.

# IP




Code	Degree of Protection (Solids)
0	No Protection
1	Protection against large foreign bodies (diameter < 50mm)
2	Protection against medium foreign bodies (diameter < 12.5mm)
3	Protection against small foreign bodies (diameter < 2.5mm)
4	Protection against small foreign bodies (diameter < 1mm)
5	Limited dust ingress protection
6	Total dust ingress protection



Code	Degree of Protection (Liquids)
0	No Protection
1	Protection against vertical water drop
2	Protection against water spray (15° from vertical)
3	Protection against water spray (60° from vertical)
4	Protection against water spray from all directions
5	Protection against low pressure water jets from any angle
6	Protection against high pressure water jets from any angle
7	Protection against water submersion to 1m for 30 min
8	Protection against specific pressure and submersion for long term



The backlight support (Pos.1) and the two caps (Pos.5/6) isolate the backlight area.

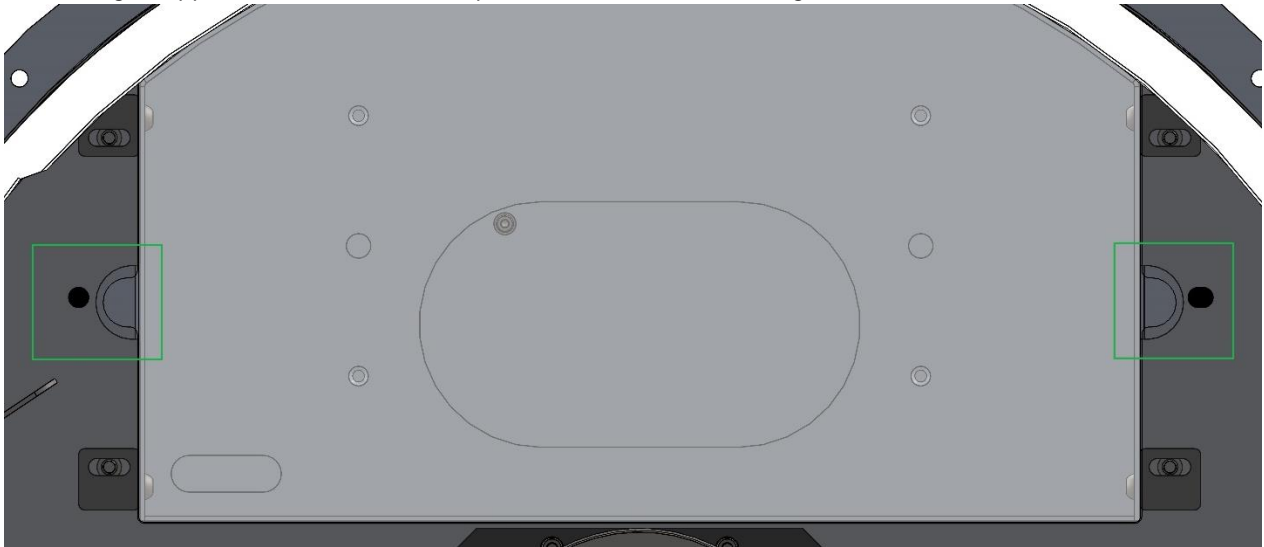

The central gasket (Pos. 2), the flip gasket (Pos. 8) and the two caps (Pos. 7) isolate the rest of the upper part of the device.

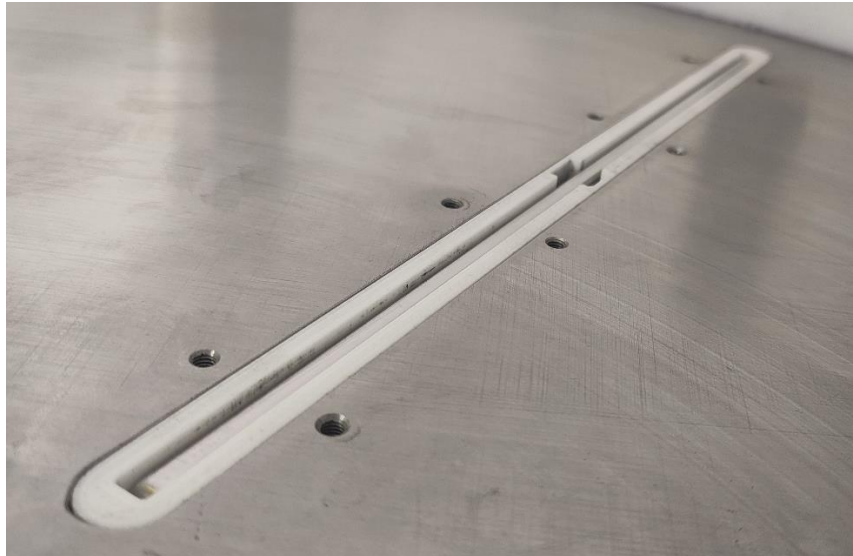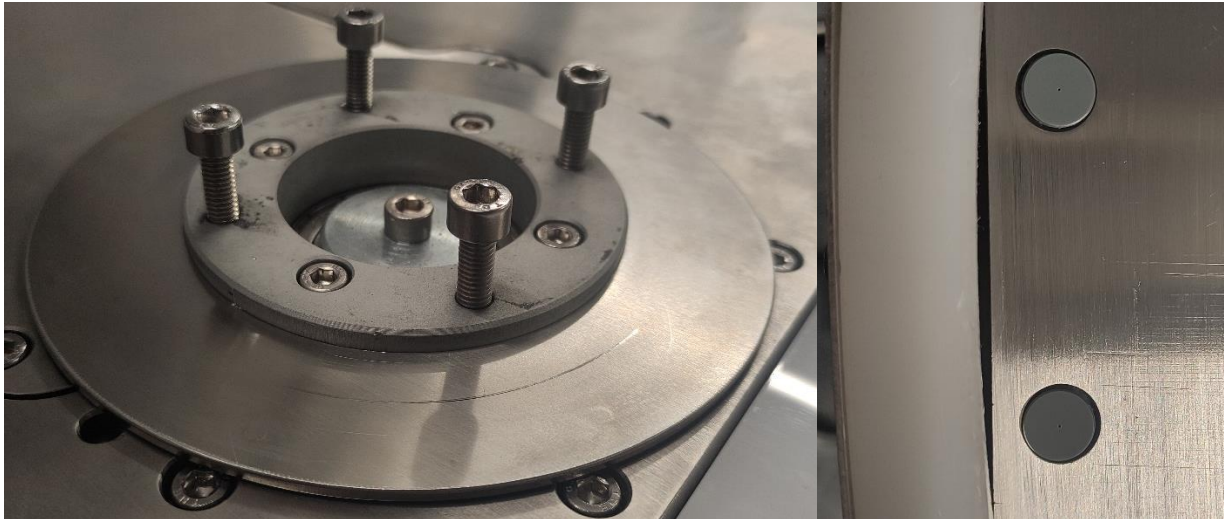


The perimeter is protected by the lettering cover strips (Pos.3).



### 1.3 Use

The IP 40 kit for **FlexiBowl**® does not alter the operation and control of the device, so please refer to the ARS technical documentation of the standard product available at: <https://www.flexibowl.it/>.

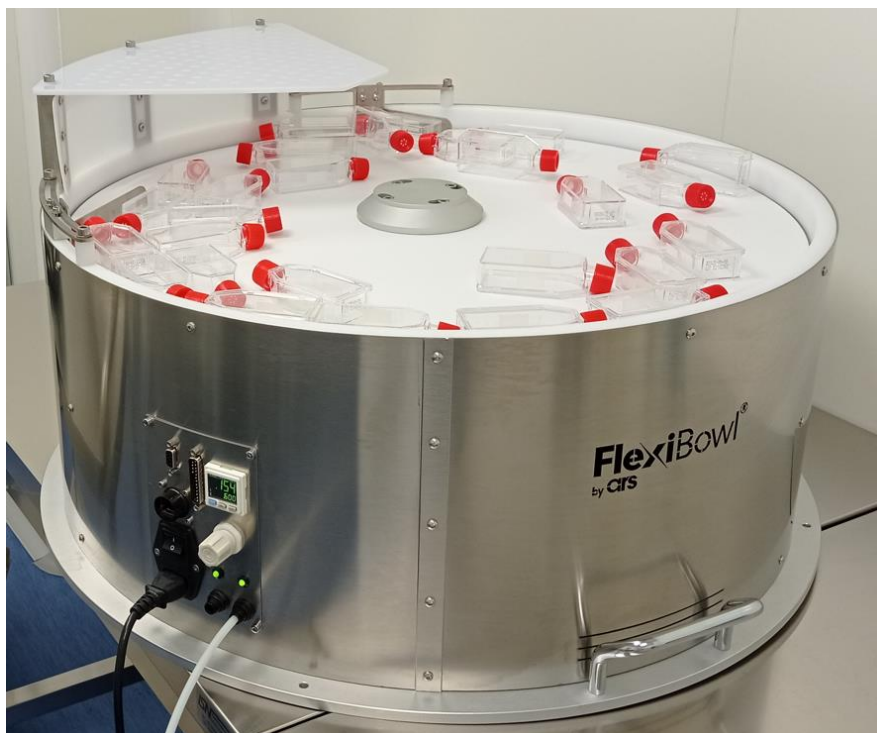

### 1.4 Installation and Maintenance

The IP 40 option kit for **FlexiBowl**® does not alter the installation and maintenance requirements of the device, so please refer to the ARS technical documentation of the standard product available at: <https://www.flexibowl.it/>.



**ARS S.r.l.**

Via G. Vico, 7 - 52100 Arezzo (AR) Italy

Tel. +39 0575 398611 - Fax +39 0575 398620

[info@arsautomation.com](mailto:info@arsautomation.com) - [www.arsautomation.com](http://www.arsautomation.com)